

AxiomVR4[™] Security System

2 Automatic Road, Suite 108 Brampton, Ontario Canada L6S 6K8

Number: 102 AxiomVR4™ Registration/Activation

AxiomVR4TM Professional Security System with the upgrade version 5.3.6R4 and AxiomVR4TM Enterprise System with the upgrade version 5.3.7R4 software comes with 14 days trial license, after which the system will not run unless user registers with RBH and activates the License.

Please note that licensing is tied to the hardware of the PC that the software is installed on. If you make changes to the hardware, the license will no longer be valid. Please ensure that your hardware setup is as required for the system before you register/activate.

Registration and Activation can be done any time during the trial period as well. Each site should register with RBH before activating their license.

User needs to sign in to AxiomV version 5.3.6/5.3.7R4 to be able to Register/Activate the software.



A successful log in will either pop up the message about Trial license.




Or if the trial license is already expired, will pop up:



Clicking OK for the first option will bring up the AxiomVR4 Security System, and clicking OK on second option will bring up Registration/Activation window.



Registration/Activation can also be done through the Help menu.

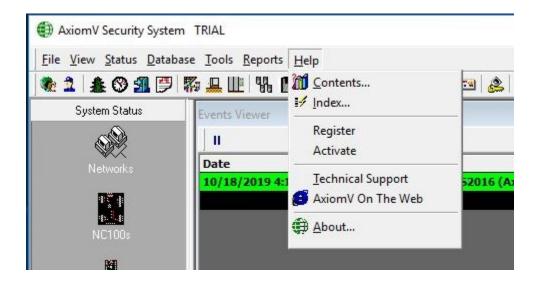


Through the **Help** menu also, you can choose to *Register* or *Activate*.




You may need to Reset toolbar from the Tools menu, if Register/Activate are not showing in Help menu.

Users need to register the site with RBH along with requesting a license.

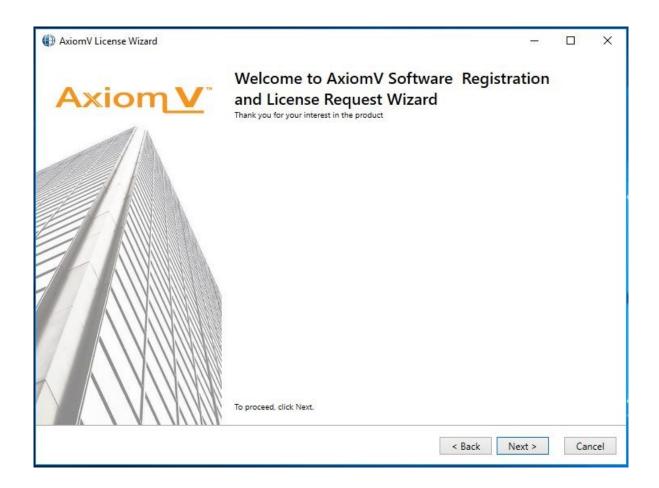

Click *Next* to open the window for selected option.


Registration

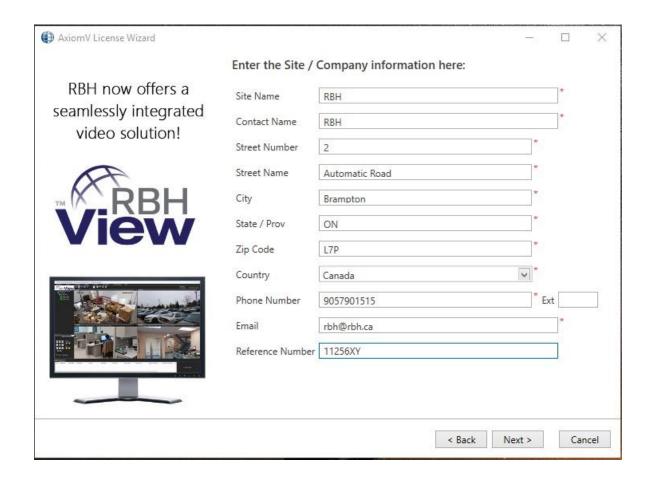

Enter the required information for Site/Company, and click Next to provide Dealer and Distributor (optional) information to RBH.




And

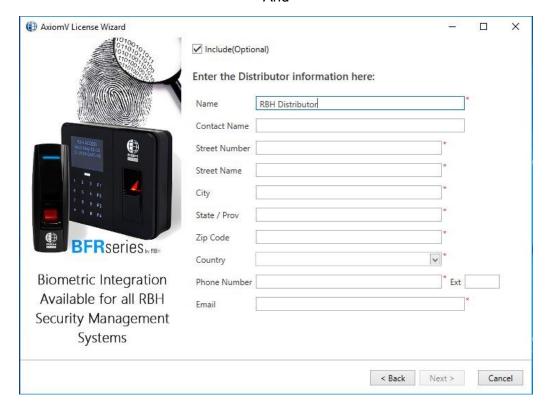


Click Next to select the location to save Registration and License Request files to send to RBH.




Click *Next* to be able to select email option to send the registration and License Request files directly through email.

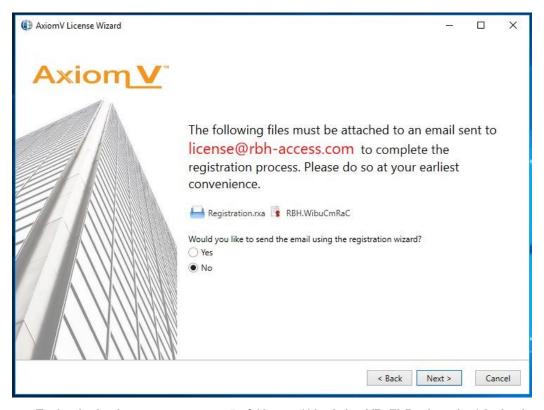

If selected Yes option, it will load the next page to fill in your email information, otherwise will save them in location selected.

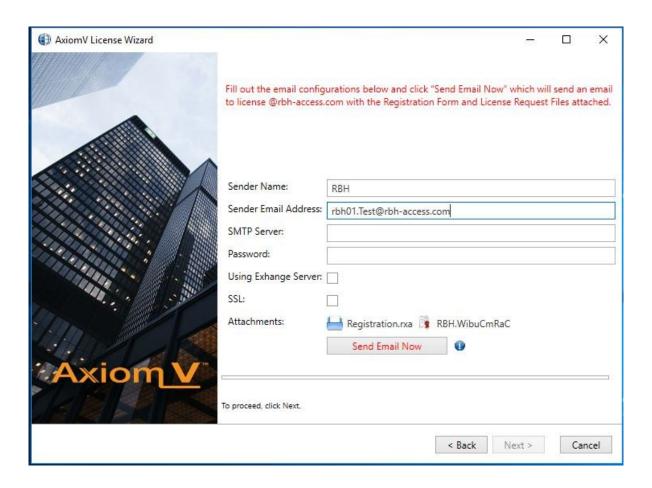

Click on Send Email Now button after filling in the required information.

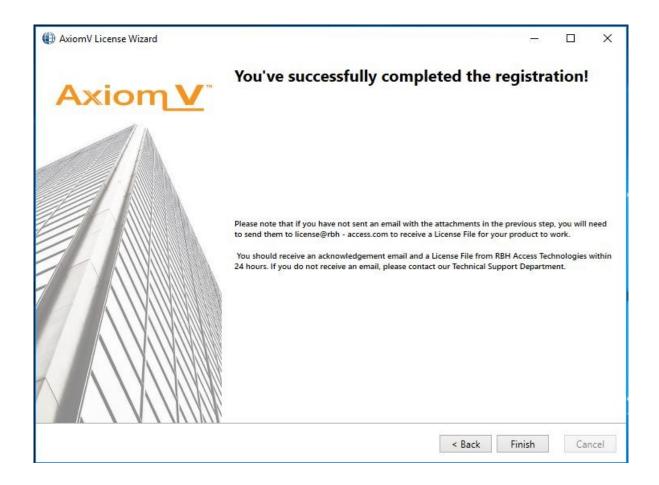


Click *Finish* and provide RBH the *Registration* (.rxa), and *License Request* (.WibuCmRaC) files.


Once RBH receives the request they will send activation file for your AxiomVR4[™] system.

License Activation

Click on Help> Activate to bring up License Activation window.

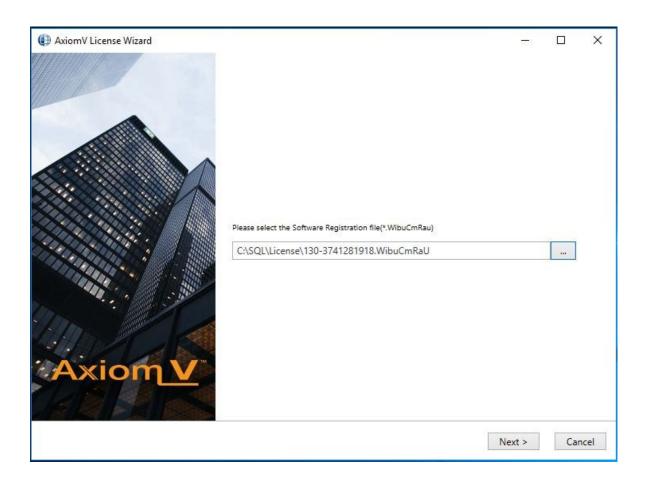


Select the license (.WibuCmRaU) file to activate the license and click on Next.

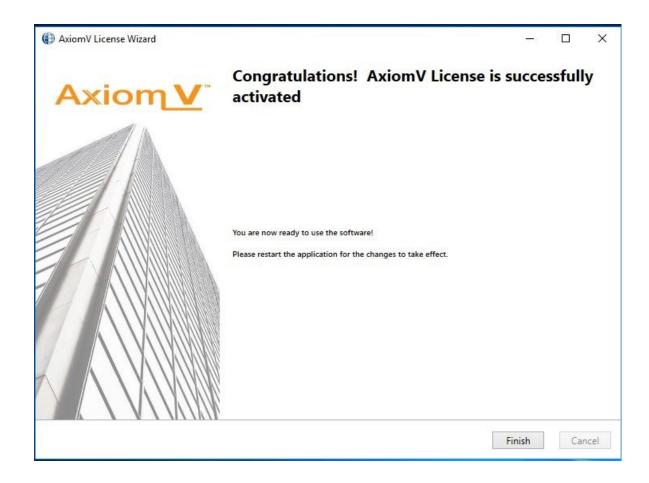

Click Finish to get out of Activation wizard.

Your License is now activated.

Log back in to AxiomVTM Security system to be able to access all the options available in your application as per your License.

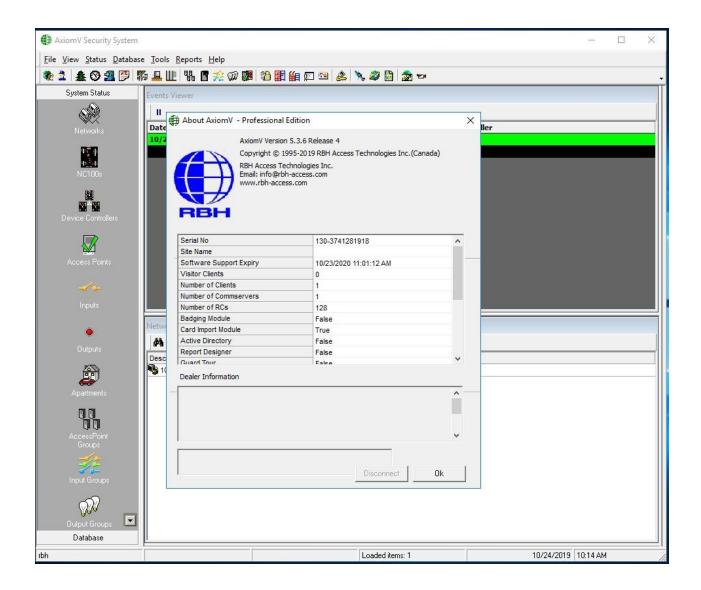

Clicking on About option from Help menu shows the license information along with Software Support Expiry date.